

THE WIDGET



The use of the widget is optional and can be removed.


It's normally not required with a traditional push in front letter plate as mail is guided and enters the lower part of the Ecoflap.

The widget is more likely to be of benefit with the *non traditional letter box flap that you lift up and tend to push mail upwards*. The widget will ensure post opens the lower part of Ecoflap and lifts the flap as and when necessary.

The widget isn't secured permanently in position as it is the customers choice to use or not use it.

The widget will normally stay in place so long as is not retrieved from the outside *after* inserting part through in the first place. This may attach itself to the withdrawn mail.

The widget can be secured simply by a drop of plastic type glue on each leg of the widget.

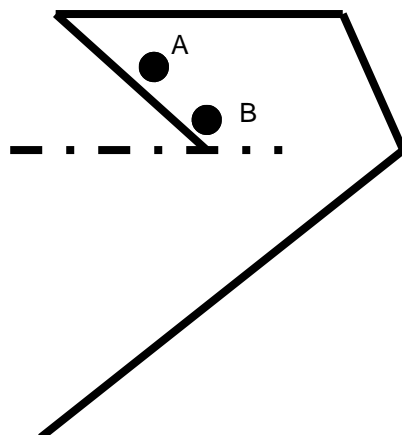

Position A Inserted widget.

Glue should run down to position B. This will lock in the widget when set.